

**KSI** CSD Series IV directional firing ceiling mount loudspeakers offer a unique wedge design that hangs below the ceiling grid, providing very wide horizontal dispersion. All CSD Series IV loudspeakers are ideal for front of room applications, perimeter surround applications, or any situation requiring a focused sound field. Installation is fast and easy without cutting tiles and subsequent cleanup.

CSD Series IV loudspeakers are easy to install, just follow these simple instructions.

- Remove the ceiling tile where you want to place your CSD loudspeaker. Remove a second ceiling tile for wiring purposes.
- Screw the supplied hooks to the rear of the loudspeaker, as in number 1.
- Slide the CSD loudspeaker up through the other opening and rest it on the grid. See number 2. The loudspeaker should look as it does in number 3.
- Make the wire connections to the electrical input & attach the hooks to the structure above. Make absolutely sure all connections meet all local electrical codes. Snap on the grille and replace the other tile.



6061-CSD



8081-CSD



8081-CSD-HP

